

# SONAI<sup>®</sup>

## Toaster - *Flair*

SH-1820




### Instruction Manual



[www.sonaiworld.com](http://www.sonaiworld.com)



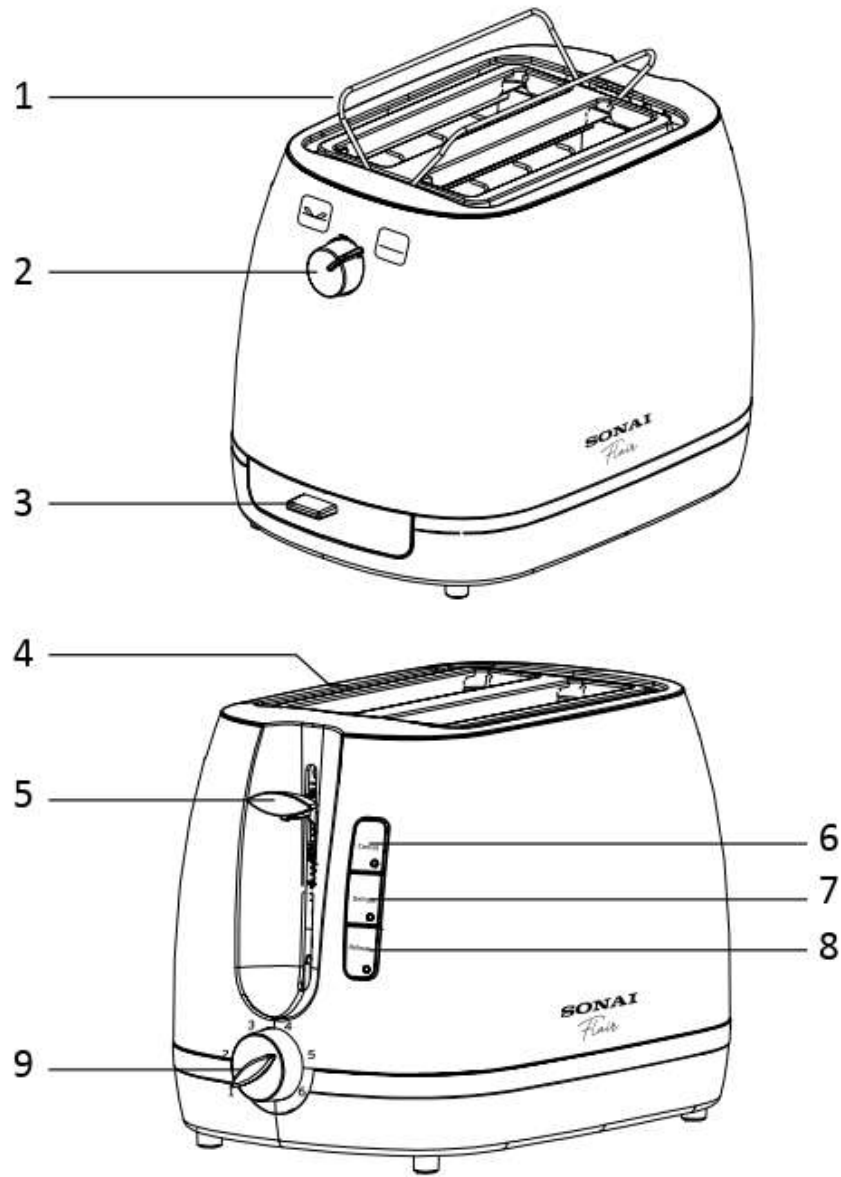

1	Bread rack	6	Cancel button
2	Bread rack knob	7	Defrost button
3	Crumbs tray	8	Reheat button
4	Toasting slots	9	Variable browning control
5	Bread carriage control lever		

## Save These Instructions

While using electrical appliances, in order to reduce the risk of fire, electric shock or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock, DO NOT IMMERSE the appliance, cord set or plug in water or other liquids.
- To clean, wipe the exterior with a damp cloth.
- Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Switch off and remove the plug from the power outlet when not in use before assembling or disassembling parts, cleaning or carrying out any maintenance of the appliance. Never pull the cord while unplugging out from power outlet.
- Do not operate the appliance if it is damaged in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustments to avoid any hazard.
- The use of attachments or accessories not recommended or sold by Sonai may result in fire, electric shock or personal injury.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance, make sure the extension cord is correctly wired, and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it to your Authorized Service Centre for repair.
- Always leave sufficient space around the appliance for ventilation.
- Do not use the unit if you have wet hands or bare feet.
- Switch off the appliance before changing accessories or approaching parts which move in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children must be supervised to ensure that they do not play with the appliance.
- Watch your toaster during use.
- Do not touch the top of the toaster or other hot parts during or directly after use
- Do not insert oversized foods, metal foil packages or utensils into the toaster.
- Do not attempt to dislodge food when the toaster is plugged in and never insert cooking utensils into slots.
- Do not place bread or other items on top of the slots as this may damage your toaster.

### **Before First Use**

- Remove all packaging material.
- Remove any stickers from the appliance.
- Make sure that the appliance is placed on a stable, flat, clean, dry and non-slip surface.

### **How to Use Your Sonai Toaster**

- 1- Plug the Toaster into a standard domestic power outlet and switch the power outlet ON.
- 2- Place bread into the bread slots and press the lever down until it locks into position.
- 3- Adjust the variable browning control to the desired toast color setting.
  - Choose a setting based on the type of bread you are toasting and your personal preference.
  - Start on a medium setting (4-3) and adjust the variable browning control to a lighter setting (1-2) or darker setting (6-5).
- 4- When toasting is completed, the toast will pop-up and the toaster automatically shuts down and then pull out power plug to cut electricity.

### **Reheat Function**

Toast can be reheated by placing cold toast in the bread slots, lowering the lever and pressing the reheat button. The reheat light will come on and the toast will be reheated over a short, fixed period of time.

**Note:** When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.

### **Cancel Function**

The toasting cycle can be stopped at any stage by pressing the Cancel button. The toast will pop up and the Toaster will automatically shut down and then pull out power plug to cut electricity .

## Defrost Function

The defrost setting is designed to first defrost and then toast your bread, which extends the toasting cycle slightly.

The defrost function is useful for thawing and toasting frozen bread all in one operation.

- Place bread or crumpets into the bread slots.
- Adjust the variable browning control to the desired toast color setting.

Use these recommended settings:

**Settings 1-2:** For refrigerated bread and thinner frozen items such as frozen pancakes.

**Settings 3-4:** For toaster pastries, frozen waffles, and (thin) French toast, and refrigerated thin bagels.

**Settings 5-6:** For thicker frozen items such as bagels, hand-cut bread, and thick French toast.

- Press the lever down to the locked position and press the defrost button.
- The defrost light will illuminate.
- When thawing and toasting are complete, the toast will automatically pop-up and the Toaster will automatically shut down & then pull out power plug to cut electricity.

## Notes

- Toasting may be interrupted during the cycle by pushing the Cancel button.
- Wait for 10 to 15 minutes before beginning the next toasting cycle.

This permits the electronically controlled thermostat to reset for the next toasting cycle.

- Do not touch the Toaster walls when the Toaster is in use.
- The lever will not lock into position if the Toaster is not plugged into a power outlet or if the power outlet is not switched on.
- When your Toaster is heated for the first time, it may emit slight smoke or odor. This is normal and should disappear after 1 or 2 uses.
- The condition of the bread will determine how quickly it toasts. Dry or stale bread toasts faster than fresh bread.
- Always unplug the power cord when you are not using the toaster.

### **Cleaning and Maintenance**

- Switch off the power outlet and unplug the Toaster; ensuring you let the Toaster cool before cleaning.
- Wipe over the exterior of the Toaster and power cord with a soft damp cloth.
- Do not use abrasives or strong household cleaners.
- The crumb trays will need to be cleaned occasionally.
- Pull out the crumb tray outward for easy removal of bread crumbs. After cleaning, slide it back to lock into position.

**Warning:** Do not try to clean the inside of the Toaster, as this may damage the heating elements.

## Electrical Safety



Always check that the power supply corresponds to the voltage on the rating plate.

To avoid the risk of electric shock, do not immerse the cord, plug or motor unit in water or other liquid.

## Protecting the environment



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment safe recycling.