

SONAI[®]

Blender *Rotato* 2x1

MAR-2510




500 W

Instruction Manual



www.sonaiworld.com

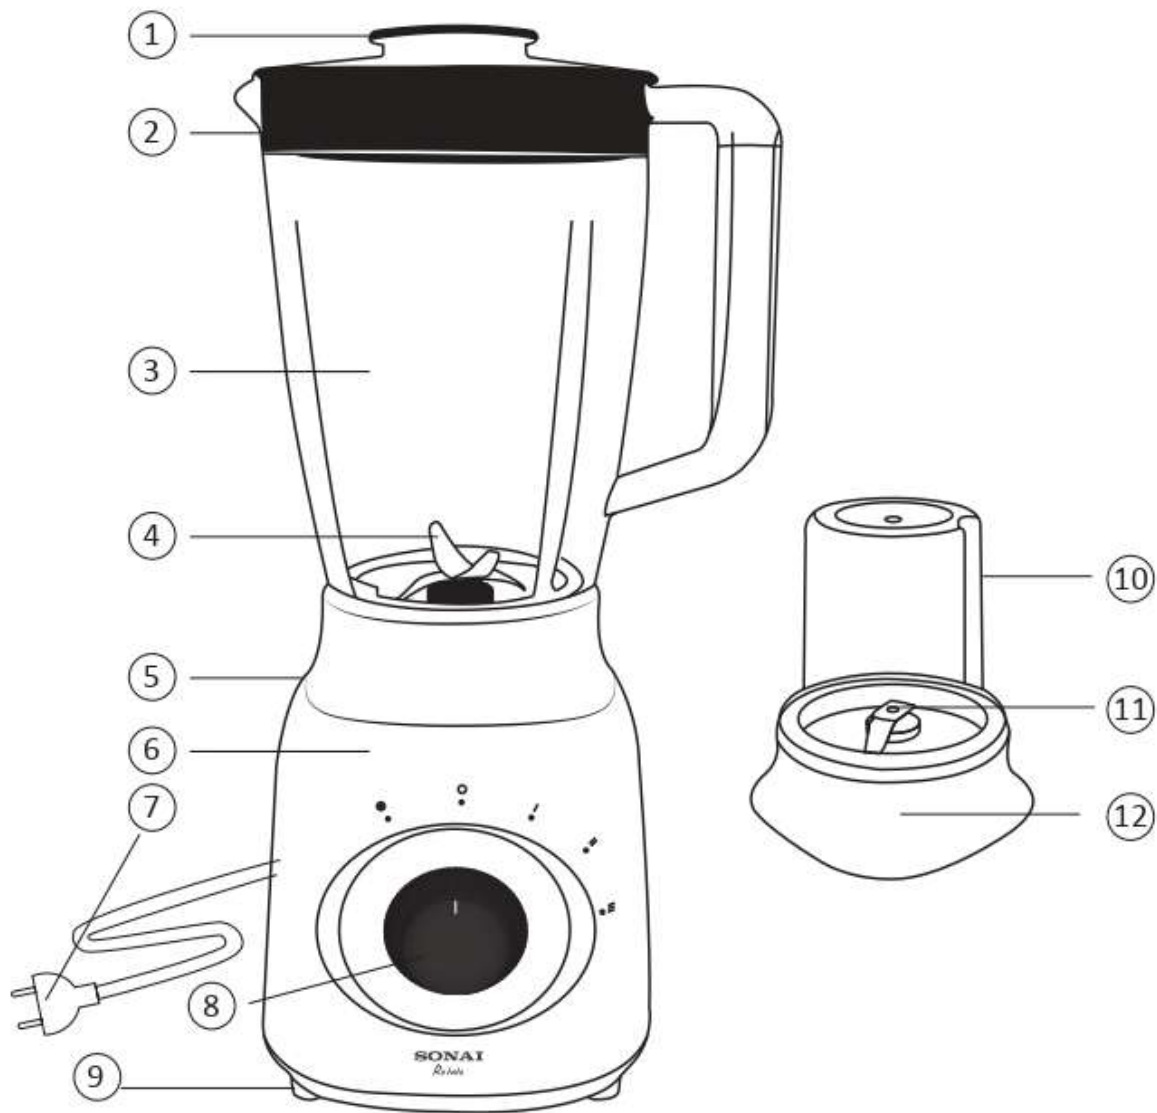

1	Filler cap with measure indicator	7	Power cord
2	Blender jar lid	8	Speed knob
3	Blender jar with measurement marks	9	Non-slip feet
4	Blades	10	Grinder lid
5	Safety lock	11	Spicies/ Coffee blade
6	Motor base	12	Grinder base

Save These Instructions

While using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock, DO NOT IMMERSE the appliance, cord set or plug in water or other liquids.

- To clean, wipe the exterior with a damp cloth.
- Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Switch off and remove the plug from the power outlet when not in use before assembling or disassembling parts, cleaning or carrying out any maintenance of the appliance. Never pull the cord while unplugging out from power outlet.
- Do not operate the appliance if it is damaged in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustments to avoid any hazard.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance, make sure the extension cord is correctly wired, and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it to your Authorized Service Centre for repair.
- Always leave sufficient space around the appliance for ventilation.
- Do not use the unit if you have wet hands or bare feet.
- Switch off the appliance before changing accessories or approaching parts which move in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Take care when handling the sharp cutting blades, particularly when cleaning or emptying the jar.

- Do not put hard things in the jar.
- Do not put your hand inside the blender during operation.

Before First Use

- Before using the appliance for the first time, ensure all the packaging is removed.
- Wipe the motor housing with a damp cloth & dry thoroughly.
- The jar & grinding attachments can be washed in warm soapy water. Rinse after cleaning & dry thoroughly with a soft dry cloth.

Caution

- Do not immerse the appliance, the cord set or the plug in water or any other liquids.
- Do not wash any parts of the appliance in a dishwasher.
- Do not use abrasives or chemical cleaners on any part of this appliance.
- Take care when handling the sharp cutting blades, particularly when cleaning or emptying the jar.

How to use your Rotato (2x1) from Sonai (Blender and Grinder)

Blender

- Place the appliance on a clean, flat, and stable surface.
- Place the jar on the motor housing and turn it in clockwise direction until it locks in place.
- Put the ingredients to the jar then fit the lid and filler cap.
(Ingredients can be added by inserting them through the hole left in the blender jar lid).

Caution: Do not exceed the maximum capacity of 1.5 liters.

- Make sure that the jar is locked in its position and connect the appliance to a suitable electrical supply.

Warning!

- Never operate the Blender without the lid fitted.
- During the first use, the unit may give off a slight odor.
- Do not operate the Blender for longer than 30 seconds.
- Do not move the jar during operation.
- When blending is complete return the switch to the off position, lift the jar from the motor housing and pour the ingredients into a suitable container.
- After use, unplug the power supply from the socket.

Note: For blending ice cubes, add one by one.

Grinder

- Put the ingredients into the lid.
- Place the assembled grinder on the motor housing and rotate it in a clockwise direction until it locks in position.
- To unlock, rotate it in anti-clockwise direction.

Warning!

- The grinder is not used for liquids.
- Do not operate the grinder for longer than 30 seconds.

Note: The grinder can be used for grinding spices and coffee.

Cleaning:

- Always clean the appliance immediately after use.

Note: Take care when handling the sharp cutting blades, particularly when cleaning or emptying the jar.

- Wipe the motor housing with a damp cloth & dry thoroughly.
- The jar & grinding attachments can be washed in warm soapy water. Rinse after cleaning & dry thoroughly with a soft dry cloth.

Caution:

- Do not wash any parts of the appliance in a dishwasher.
- Do not use abrasives or chemical cleaners on any part of this appliance.

Electrical Safety



Always check that the power supply corresponds to the voltage on the rating plate.

To avoid the risk of electric shock, do not immerse the cord, plug or motor unit in water or other liquid.

Protecting the environment



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment safe recycling.

ملاحظة: المطحنة تُستخدم لطحن البن والتوابل.

تحذير

- لا تستخدم المطحنة مع السوائل.
- تجنب تشغيل المطحنة لمدة تزيد عن 30 ثانية.

التنظيف

- إحرص دائماً على تنظيف الجهاز عقب الإستخدام فوراً.

ملاحظة: ينبغي توخي الحذر عند التعامل مع شفرات القطع الحادة، خاصة عند تنظيف أو تفريغ الوعاء.

- امسح جسم الموتور بقطعة قماش مبللة وجففها جيداً.
- يمكن تنظيف الوعاء وملحقات الطحن بالماء الدافئ المحتوى على صابون. قم بالشطف بعد التنظيف، وقم بالتجفيف جيداً باستخدام قطعة قماش ناعمة جافة.

ملاحظات

- لا تستخدم المنظفات الكاشطة أو الكيماوية فى أى جزء من هذا الجهاز.
- لا تغسل أى جزء من هذا الجهاز فى غساله الأطباق.

السلامة الكهربائية

- التأكد من توافق محول الكهرباء مع الجهد الكهربائي للجهاز في لوحة البيان.
- تجنب غمر السلك أو القابس في أى سوائل لتجنب خطر الصدمة الكهربائية.



حماية البيئة

تشير هذه العلامة إلى ضرورة عدم التخلص من المنتج بعد تلفه بالطرق العادية للتخلص من النفايات المنزلية في دول الإتحاد الأوروبي، لمنع حدوث أي أضرار محتملة تؤثر سلباً على البيئة أو صحة الإنسان نتيجة لإتباع طرق التخلص من المخلفات بصورة غير منضبطة أو إعادة تدويرها بشكل يسمح بإعادة إستخدامها بصورة مستمرة. لكي يتسنى لك إعادة المنتج بعد إستخدامه، يرجى إتباع أنظمة الإعادة والتجميع أو الإتصال بتاجر التجزئة الذي إستريت منه المنتج حيث يمكنه تدويره بطريقة آمنة على البيئة.



قبل الإستخدام لأول مره

- قبل إستخدام الجهاز لأول مرة، ينبغي التأكد من إزالة كافة مواد التغليف.
- أمسح جسم الموتور بقطعة قماش مبللة وجففها جيداً.
- يمكن غسل الوعاء وملحقات الطحن بالماء الدافئ المحتوى على صابون، قم بالشطف بعد التنظيف، و قم بالتجفيف جيداً بإستخدام قطعة قماش ناعمه جافه.

تحذير

- لاتغمر الجهاز أو السلك أو القابس فى الماء أو أى سائل آخر.
- لا تغسل أى جزء من هذا الجهاز فى غسالة الأطباق.
- لا تستخدم المنظفات الكاشطه أو الكيماويه فى أى جزء من هذا الجهاز.
- ينبغي توخى الحذر عند التعامل مع شفرات القطع الحاده، خاصة عند تنظيف أو تفريغ الوعاء.

كيفية إستخدام الخلاط والمطحنة

الخلاط

- ضع الجهاز فوق سطح نظيف و مستو.
- ضع الوعاء فوق جسم الموتور و قم بإدراة فى إتجاه حركة عقارب الساعة حتى إستقراره فى موضعه.
- قم بإضافة المكونات فى الوعاء ثم قم بتركيب غطاء الوعاء وغطاء وحدة التعبئة (يمكن إضافة المكونات من خلال إدخالها عبر الفتحة العلوية الموجودة فى غطاء الوعاء).

ملاحظة: لا تتجاوز السعة القصوى التى تبلغ 1.5 لتر.

- تأكد من أن الوعاء قد تم تثبيته بإحكام ثم قم بتوصيل الجهاز بمصدر كهربائى مناسب.

تحذير

- عند الإستخدام لأول مرة، قد يصدر من الجهاز رائحة بسيطة.
- تجنب تماماً تشغيل الخلاط بدون تركيب الغطاء.
- تجنب تماماً تشغيل الخلاط لمدة تزيد عن 30 ثانية.
- لا يجب تحريك الوعاء أو المطحنة أثناء التشغيل.
- عند إكمال الخلط، قم بإعادة المفتاح إلى موضع الإيقاف، ارفع الوعاء من فوق وحدة المحرك و صب المكونات فى وعاء مناسب.
- بعد الإنتهاء من الإستخدام، إفصل الجهاز من التيار الكهربائى.

ملاحظة: لطحن مكعبات الثلج، قم بوضع المكعبات واحدة تلو الاخرى فى الوعاء أثناء الدوران.

المطحنة

- ضع المكونات فى المطحنة.
- ركب الغطاء فوق المطحنة و قم بإدراة فى إتجاه حركه عقارب الساعة حتى إستقراره فى موضعه.
- ضع المطحنة المجمعمة فوق جسم الموتور و قم بإدراة فى إتجاه حركه عقارب الساعة حتى إستقرارها فى موضعها.
- لفك المطحنة، قم بإدراة فى عكس إتجاه عقارب الساعة.